

USER MANUAL FOR LAE „AT-1“ THERMOSTAT

Thermostat operating parameters are programmed by the factory.

The user is not allowed to try or change the factory settings.

In this manual the settings allowed for user modification are shown and described.

1. Description



Indications

- Thermostat output
- RL2** Auxiliary output
- Alarm

Buttons

- Info / setpoint
- Manual defrost / decrease
- Increase / manual activation
- Exit / stand-by

2. Operation

Display

During normal operation, the display shows either the temperature measured or one of the following indications:

DEF	Defrost in progress	HI	Room high temperature alarm
REC	Recovery after defrost	LO	Room low temperature alarm
OFF	Controller in stand-by	E1	Probe T1 failure
CL	Condenser clean warning	E2	Probe T2 failure
DO	Door open alarm		

1. Defrost

Timed defrost. Defrosting starts automatically once every 6 hours.

2. Thermostat output

The indicator light in front of shows that the refrigeration unit is currently in the work mode.

Buttons

3. Display of desired temperature value

Press button  for at least half a second, to display the setpoint value.

The temperature shown on the display is the temperature value, which the appliance tries to maintain. (Appliance shuts down when the desired temperature is reached). Factory default is set to 4°C.

4. Modification of desired temperature value

Press button  for at least half second, to display the setpoint value.

By keeping button  pressed, use button  or  to set the desired value (adjustment is within 2°C ... 10 °C).

When button  is released, the new value is stored.

**The manufacturer has no liability if the manual described above is ignored and therefore the products have been damaged or do not work properly.
The manufacturer has right to make changes in the manual.**